












































Simplified user manual

Euro-150TE Flexy

Before starting to work, please read this user manual!

1. Turn on 
 2. Wait until the "TESZTEK" word disappears and then the time and date appears instead.
 3. Opening the day    enter the starting amount of money by value types.
 ...  
 4. SELLING After entering the starting amount the cash register will automatically switch to selling mode.
 5. Giving receipt price  (for more items) 
 6. Clear screen  (this can also clear the total amount on the customer screen)
 7. Deleting last item  (only within receipt!)
 8. Not last item deletion   select the incorrect item then 
 9. Multiplying quantity (of pieces or weight)  unit price 
 10. Switching between operating modes    ... until "FŐ MENÜ" appears on the screen
  ... 
- Reporting / closing in case you are initiating them from selling mode (ÉRTÉKESÍTÉS mode)!*
11. Querying sale returns    FŐ MENÜ/X-ÜZEMMÓD   
 12. Cash register report    FŐ MENÜ/X-ÜZEMMÓD    
 13. Closing the day     FŐ MENÜ/Z-ÜZEMMÓD   
 14. Turn off 

ECR-Trade Pénztárgép Zrt. must agree to copy or spread this user manual. All rights reserved.